

TELEPHONE CONVERSATION RECORDER

 
FEATURES

1. Automatically records two way telephone conversations.
2. Normal or slow speed switch to double the recording time using the same tape.
2. Build in microphone for Normal Recording.
3. Normal Cassette Tape Player.
4. Monitor.

A. MAINS POWERED using a DC6V, 300MA adaptor.



Remove the batteries from the battery compartment. Plug the cable from the adaptor into the socket marked DC6V and plug the adaptor into the mains socket.

B. BATTERY POWERED: Remove the mains adaptor completely from the mains and the recorder otherwise it will not work. Use 4 UM-3/SUM-3 or AA CELLS.

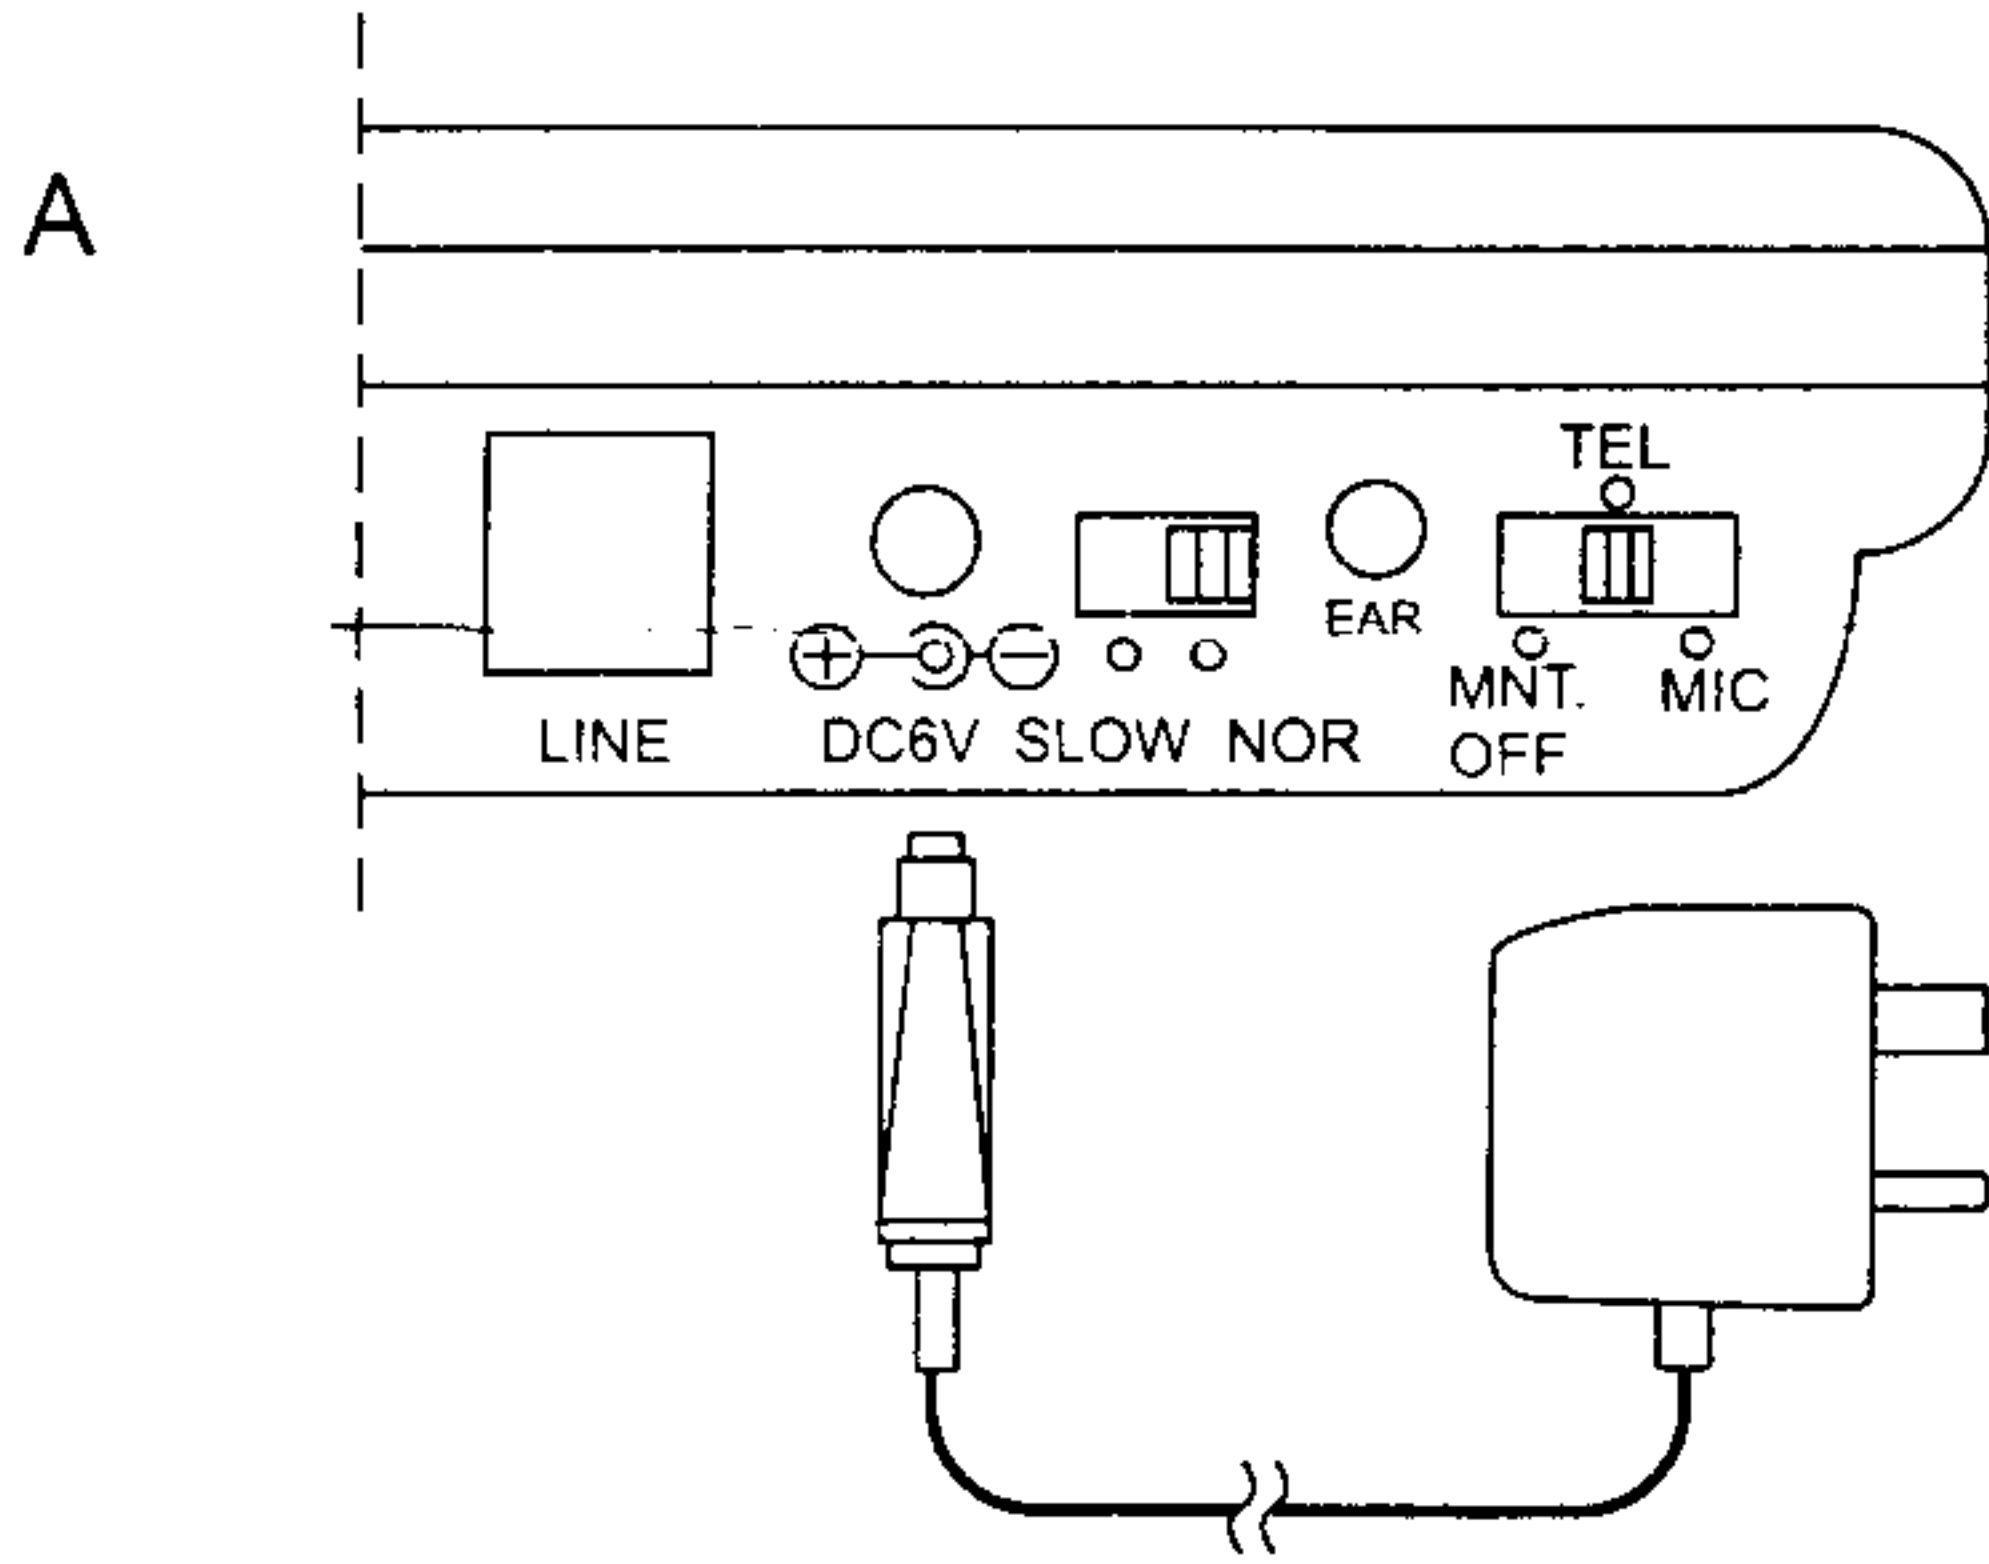



RECORDING TWO WAY TELEPHONE CONVERSATIONS.

- A. Switch the switch to the TEL Position.
- B. Press RECORD and PLAY buttons simultaneously.
- C. Slide the speaker volume control to the LOW position.
- D. The unit will start to record automatically when someone picks up the handset and stop recording when someone hangs up the handset. To monitor the conversation, increase the speaker volume to a suitable level.

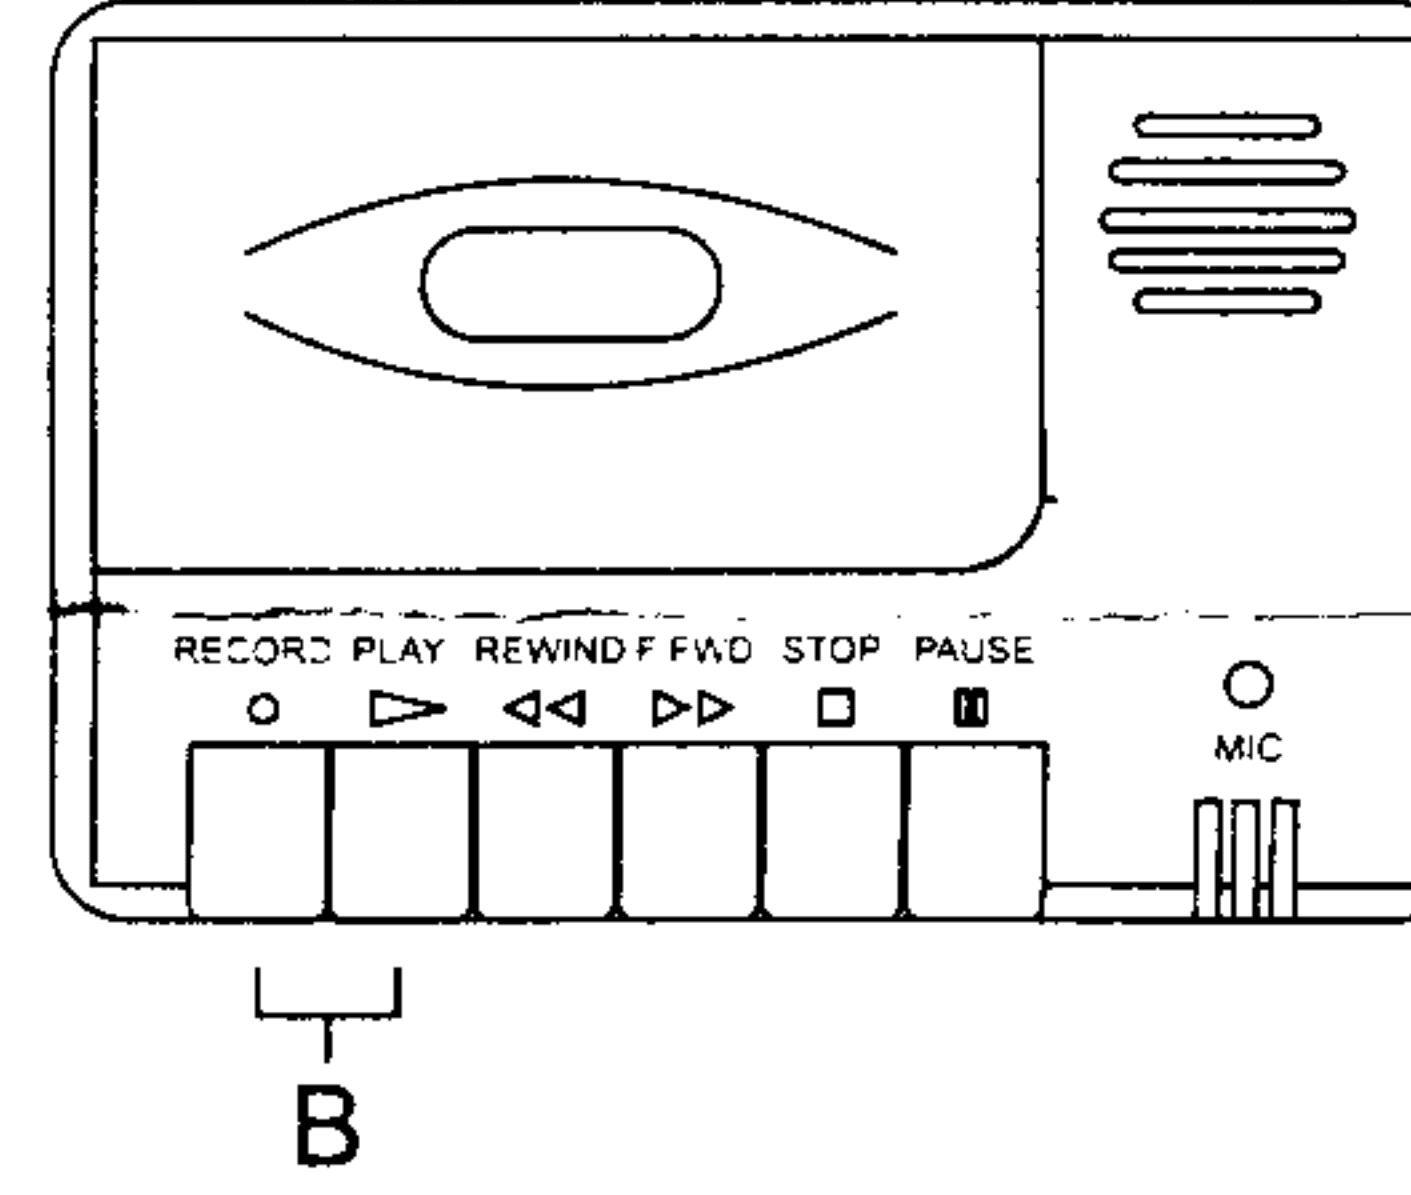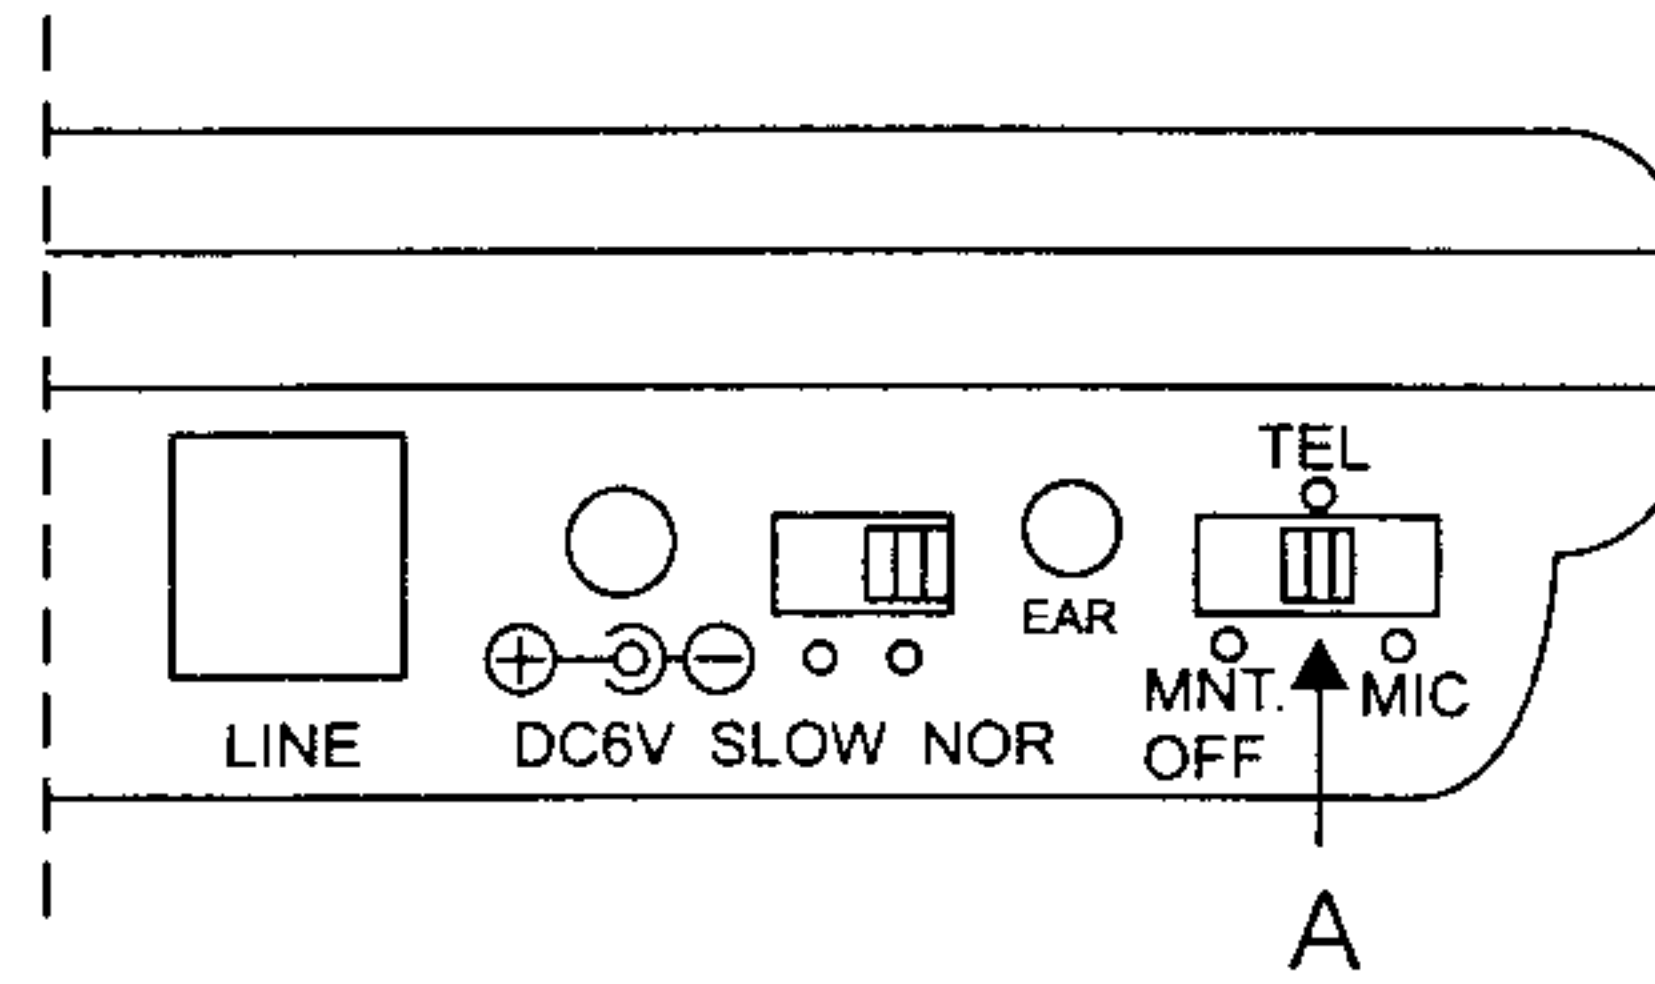

NORMAL RECORDING USING THE MICROPHONE


- A. Switch the switch to the MIC position.
- B. Press RECORD and PLAY buttons simultaneously, the unit will start to record.

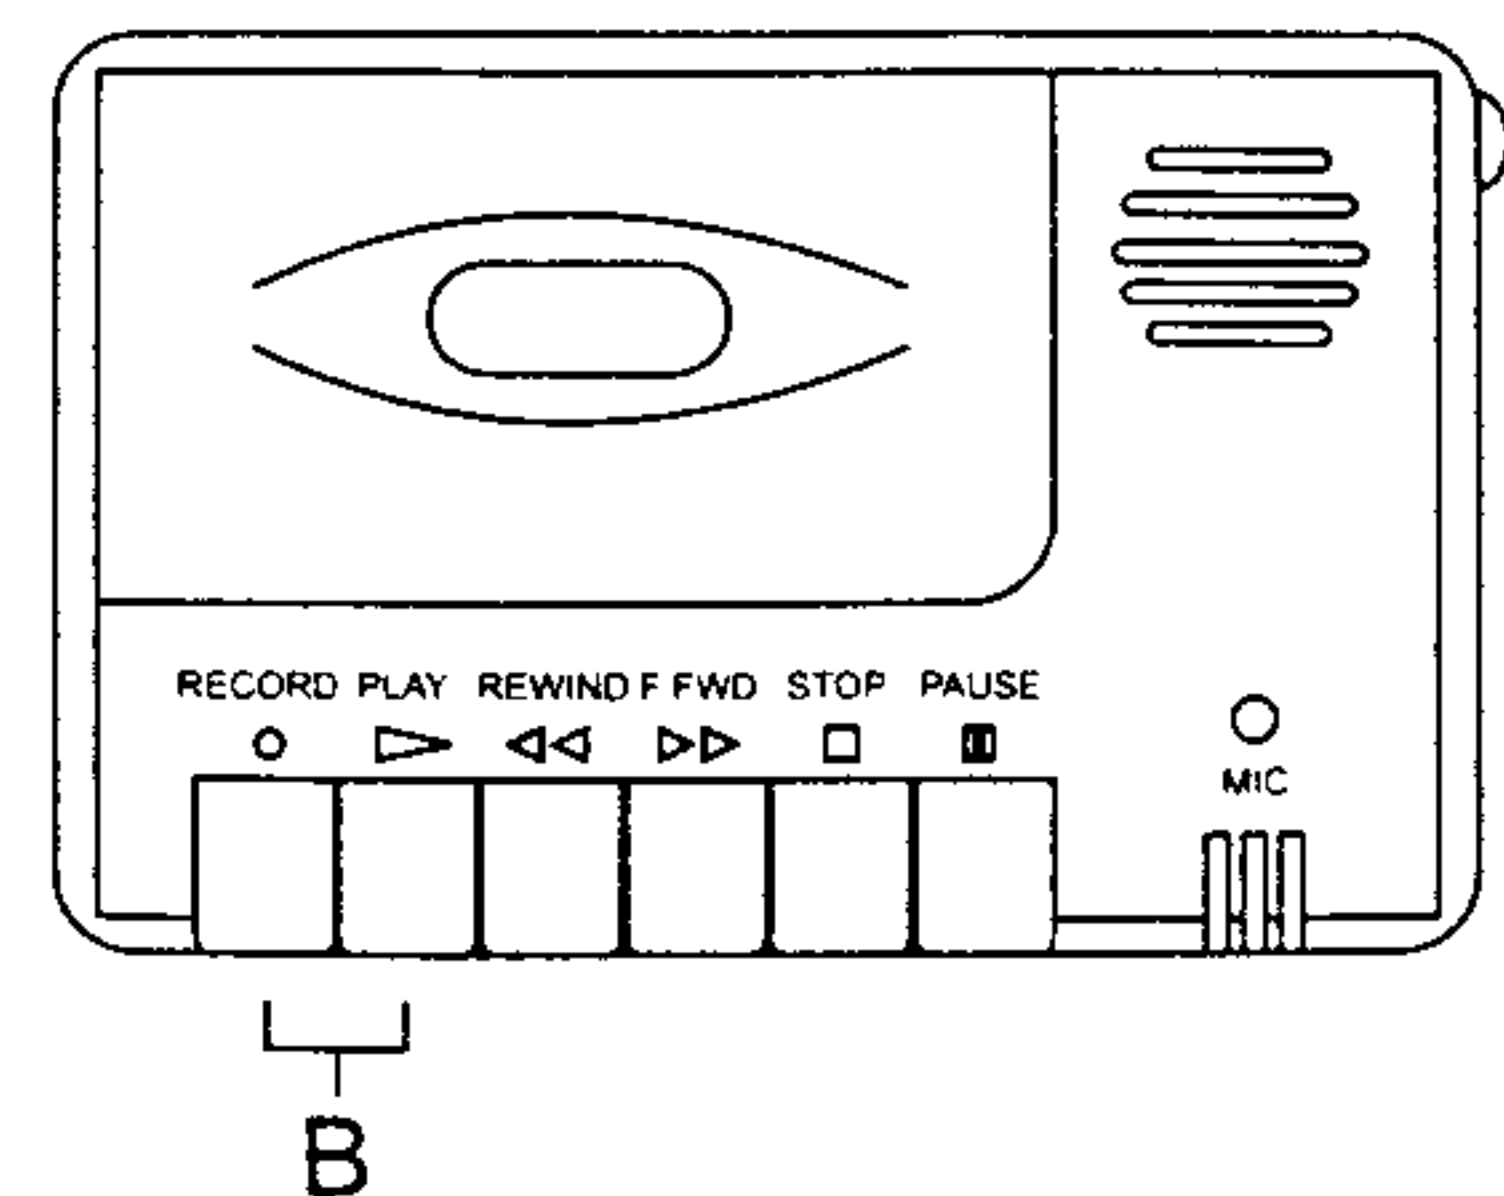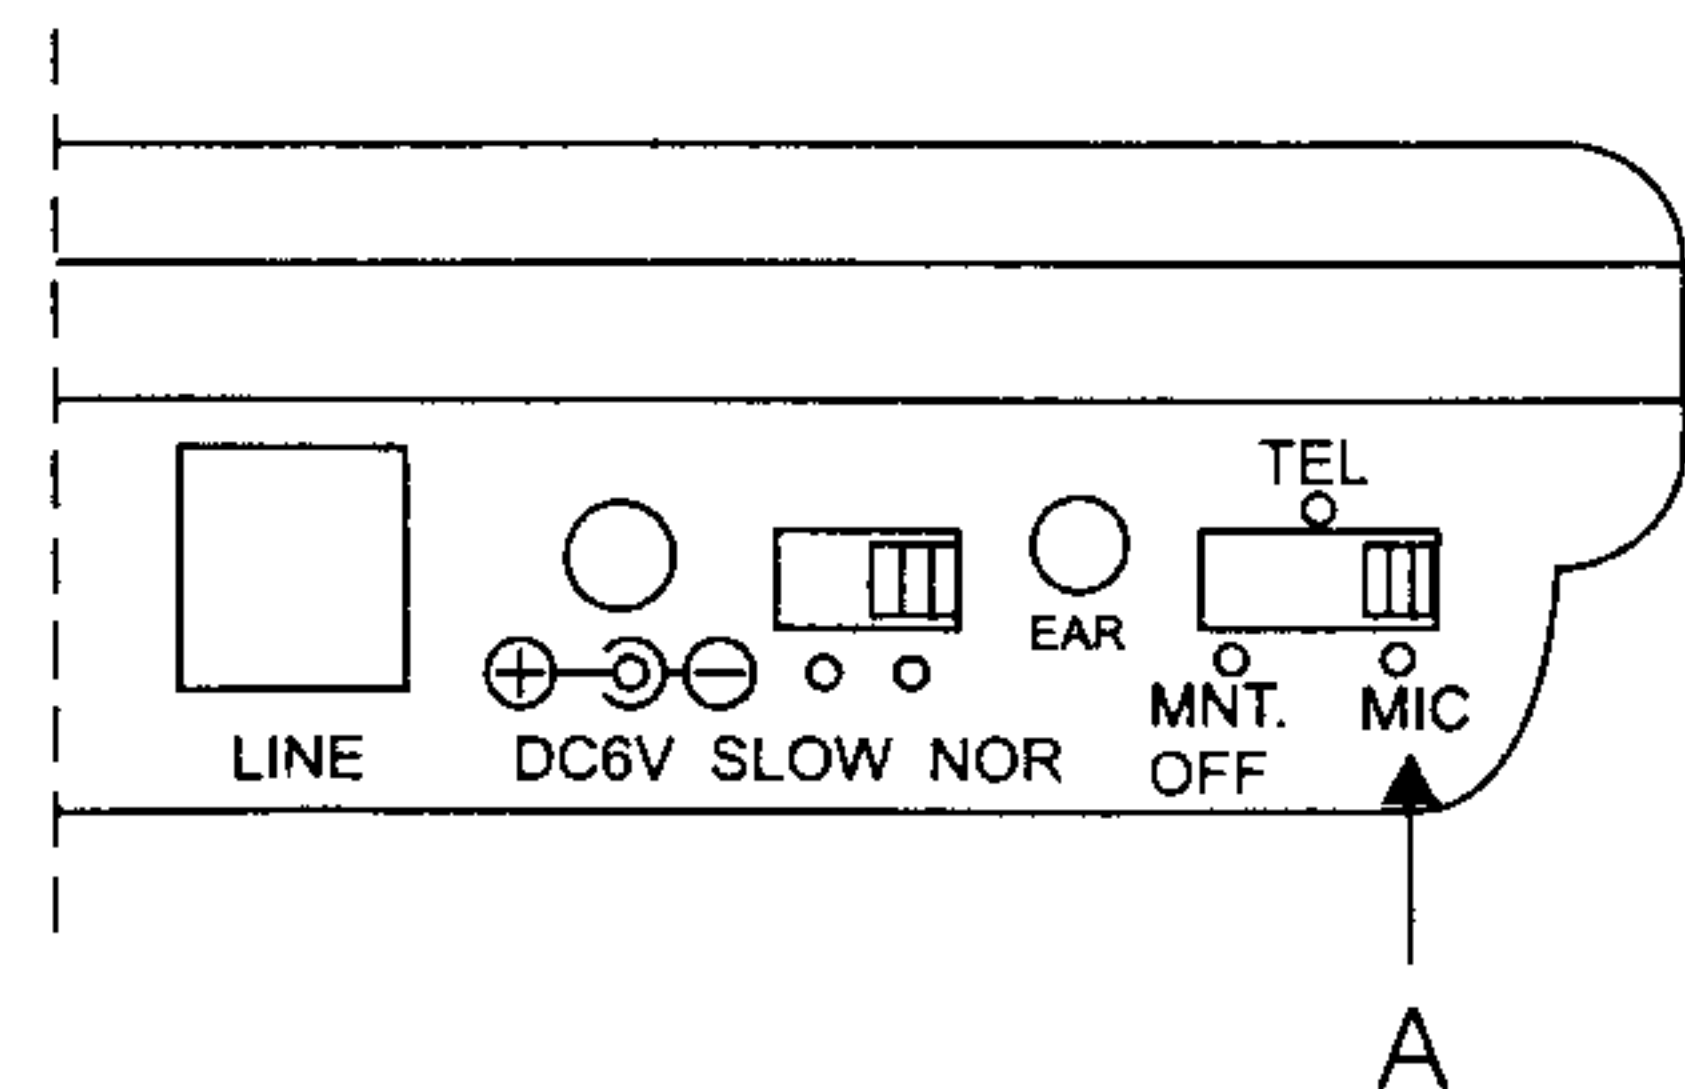

SETUP



Plug both your Recorder and Telephone into a normal Telephone socket via the adaptor provided. (see Diagram below).

The Recorder can actually be plugged in on its own if required. It will still pick up conversations from Telephones plugged in elsewhere on the same circuit.

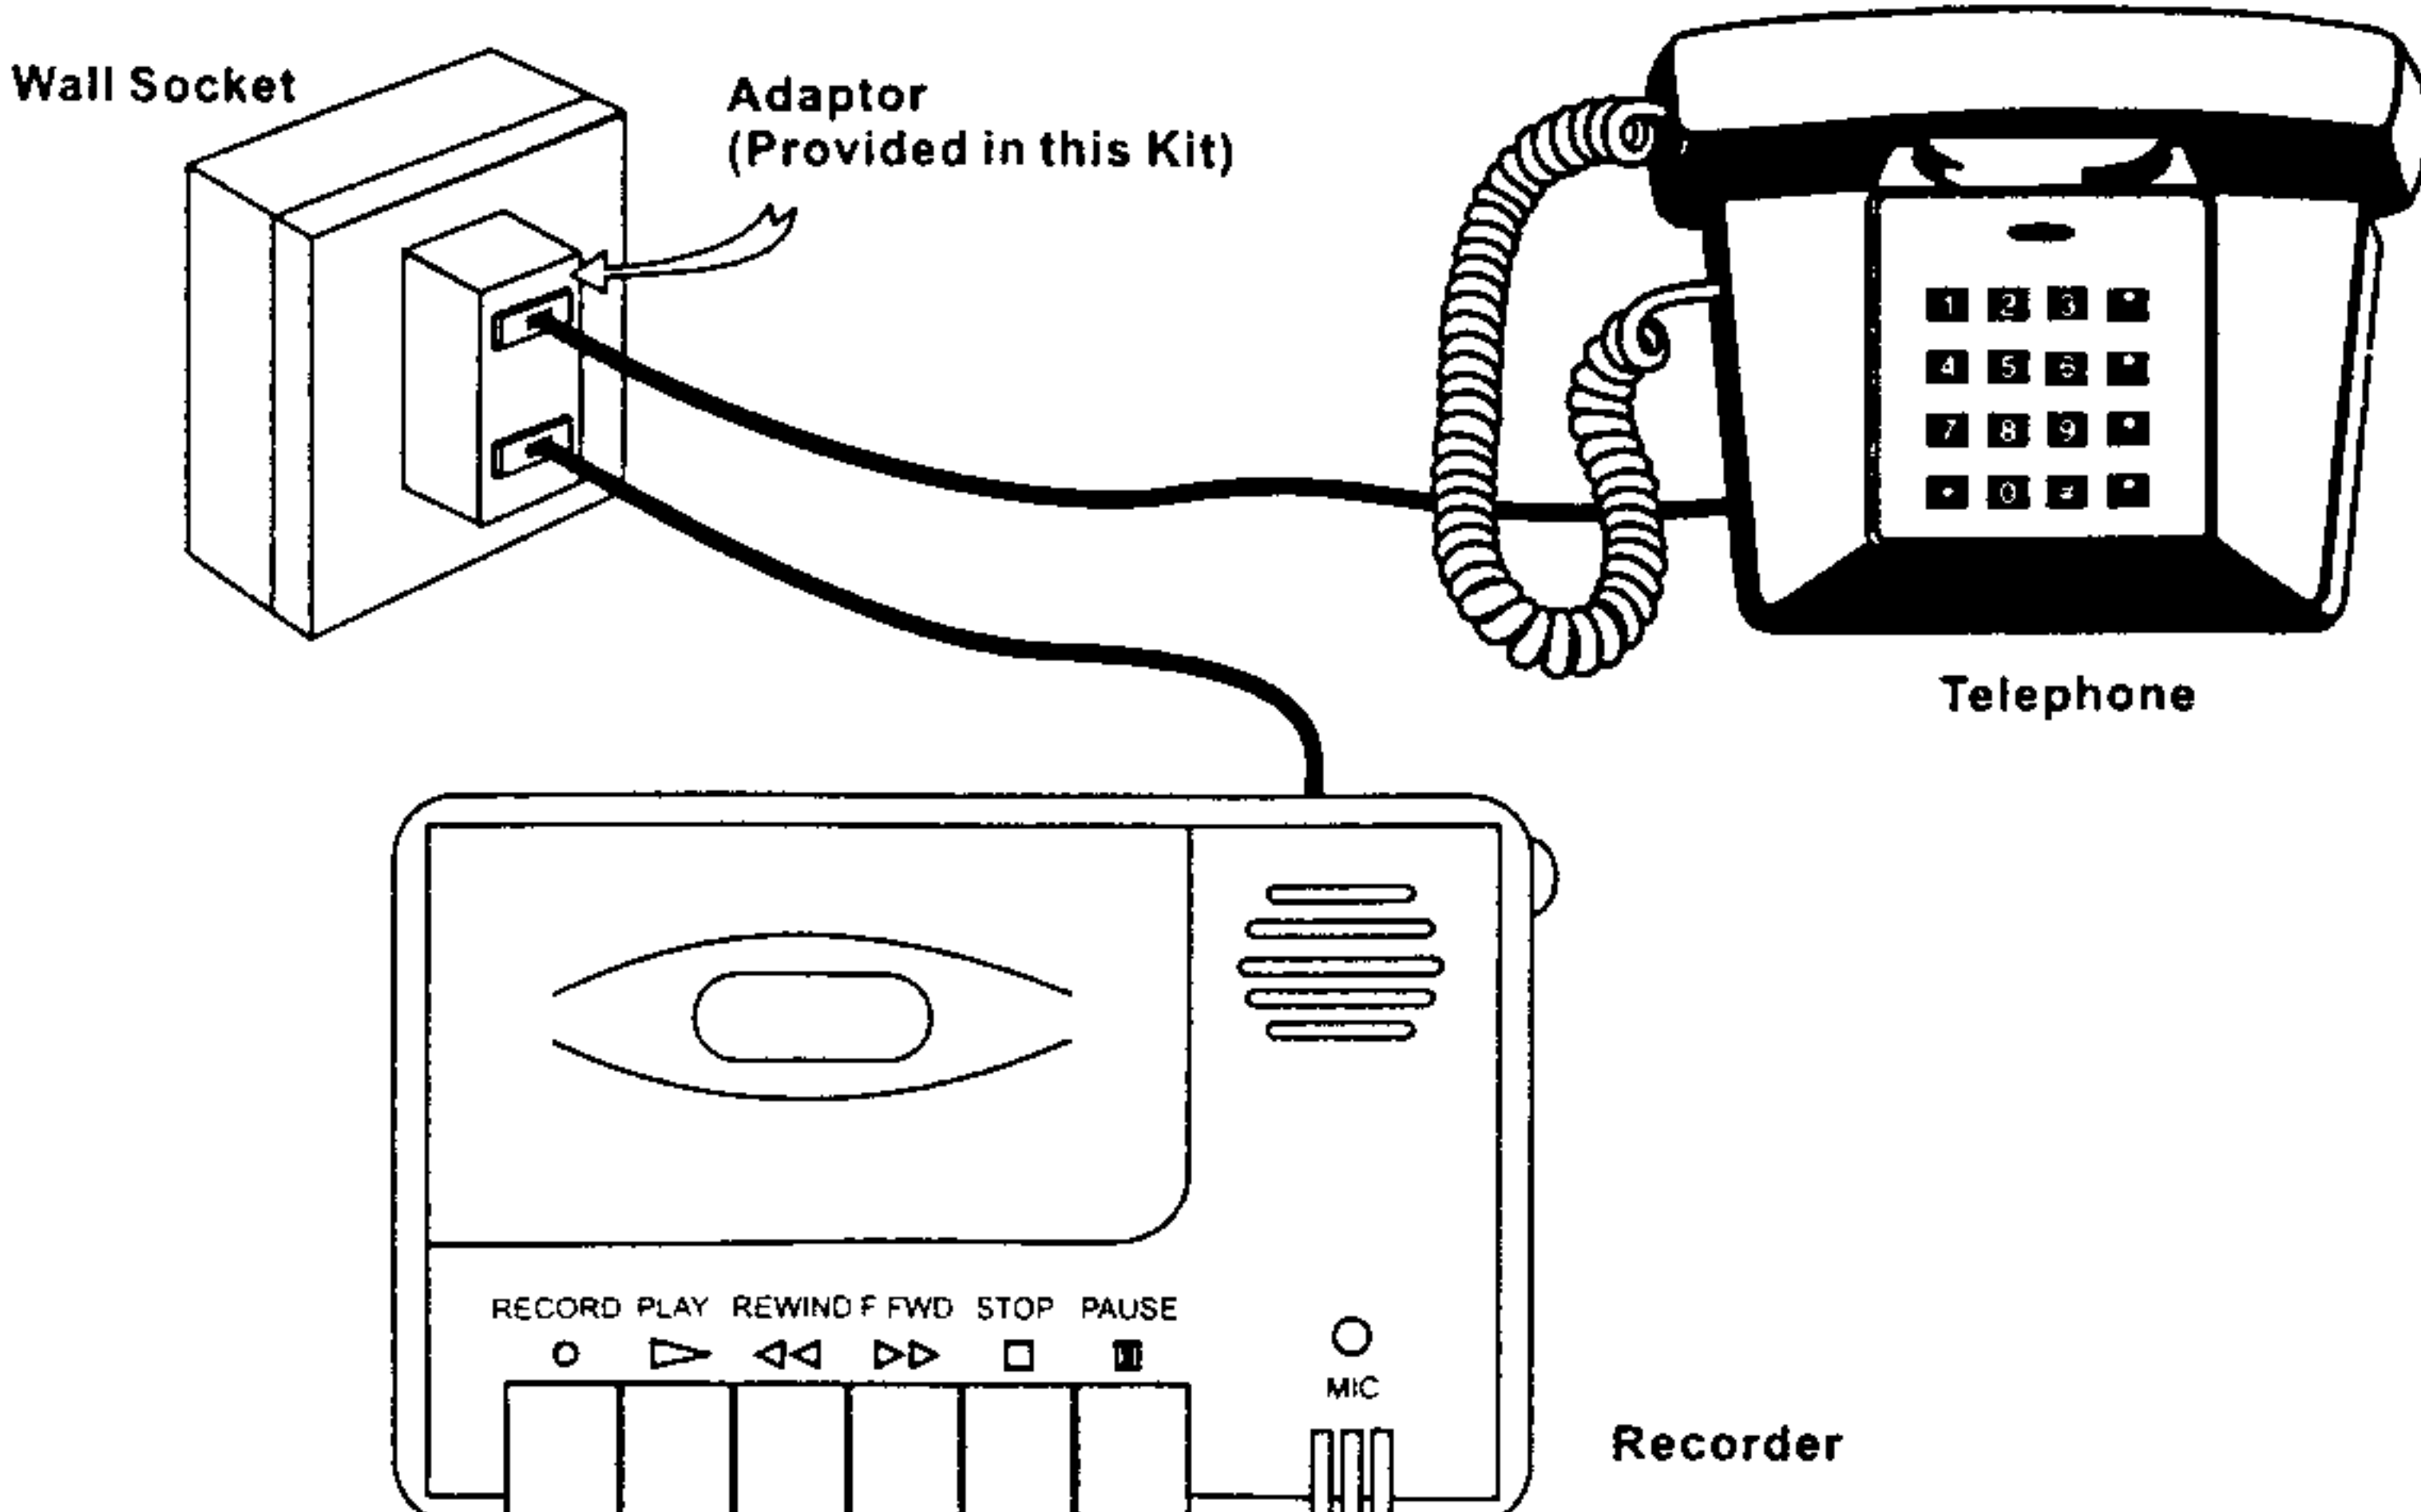



HOW TO REPLAY THE MESSAGE

- Switch the switch to the TEL position.
- Press REWIND button to rewind the tape. When it reaches the start of the recording, press the STOP button.
- Press PLAY button
- Adjust the VOLUME control for a satisfactory level.

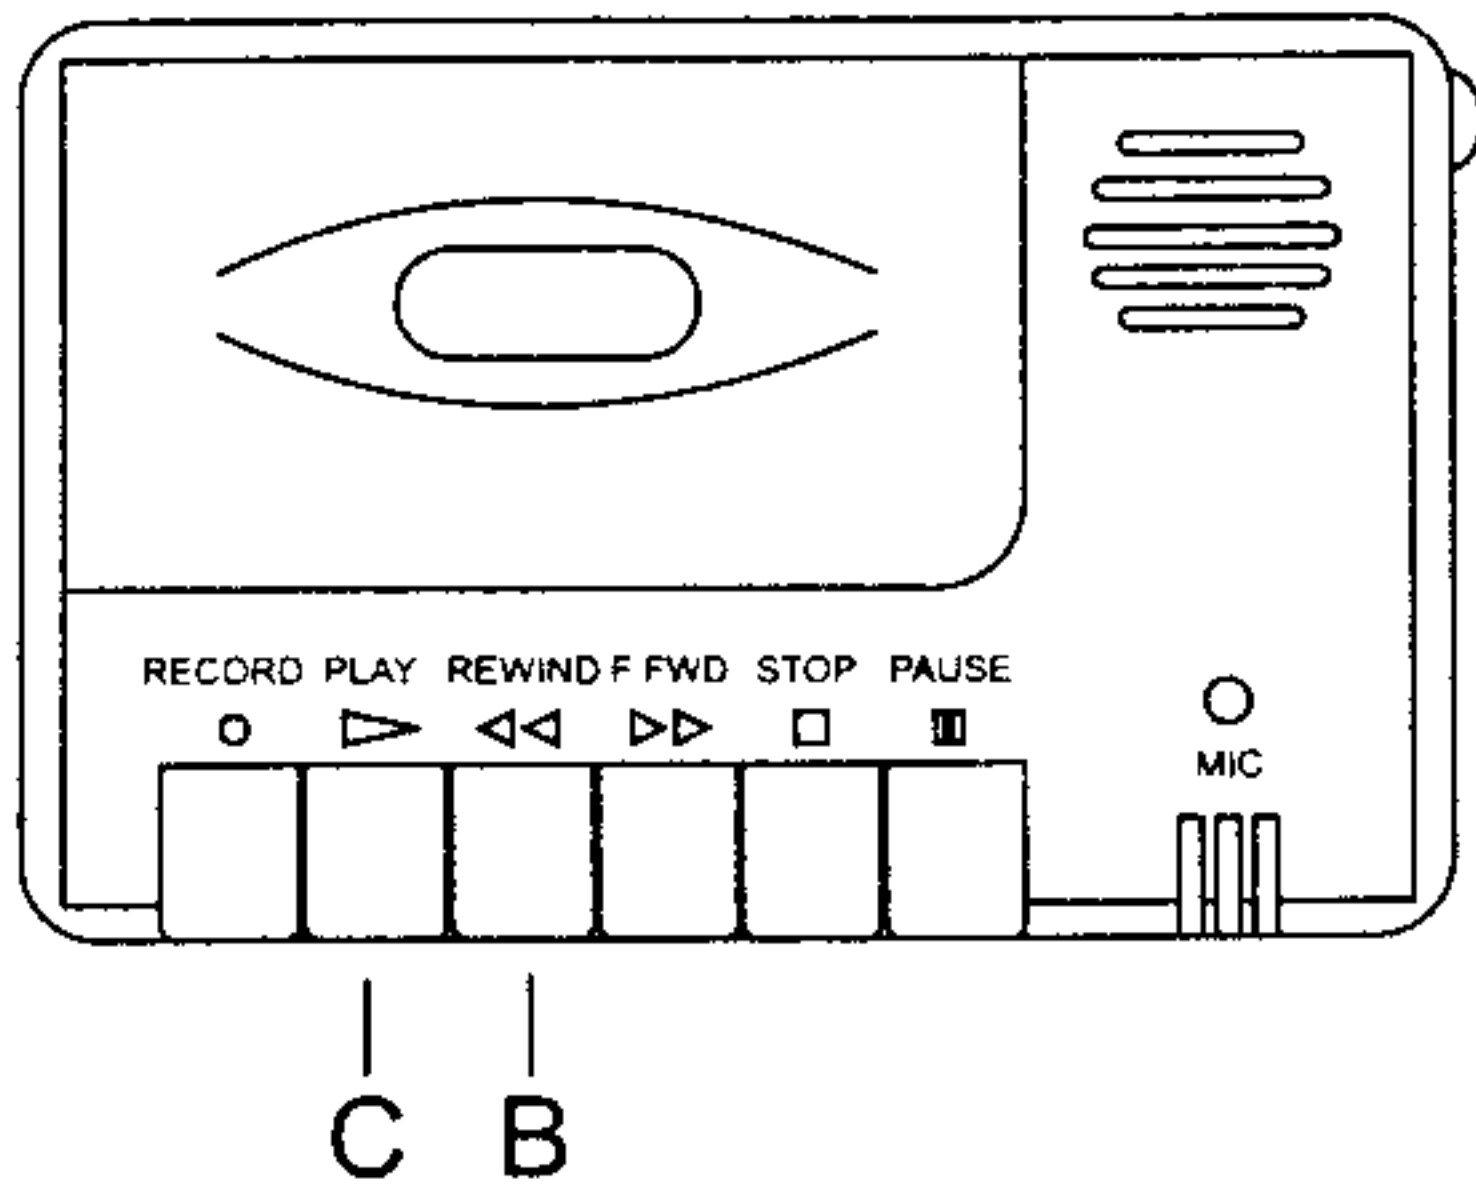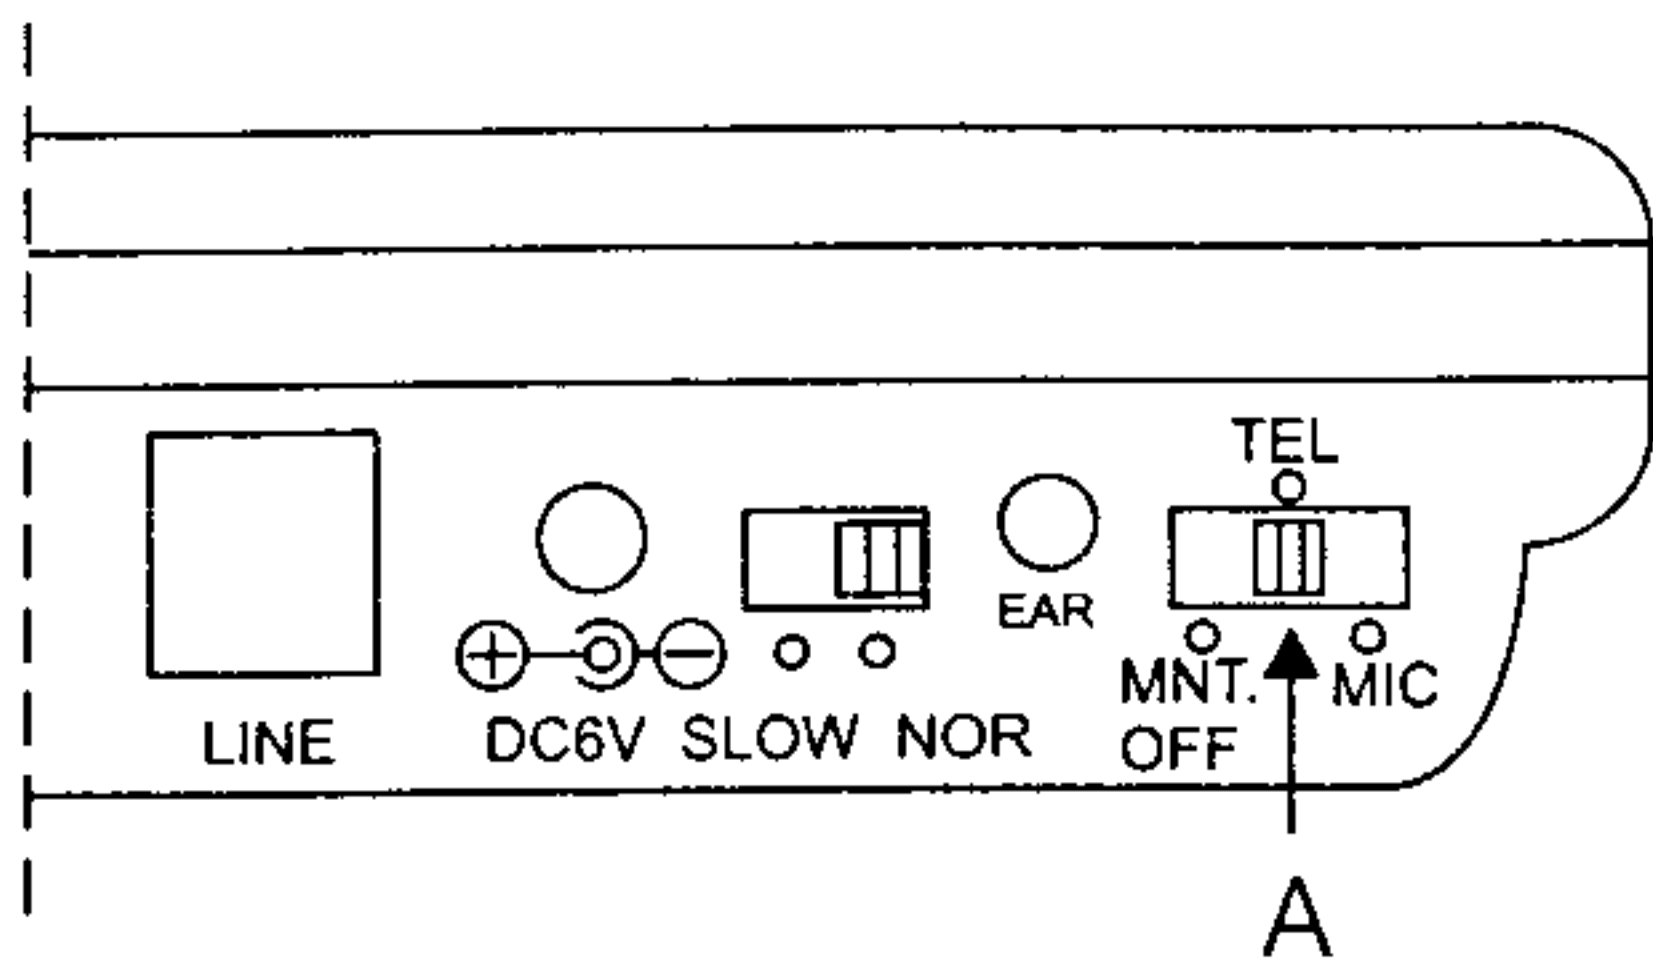

MONITORING TWO WAY TELEPHONE CONVERSATIONS WITHOUT RECORDING


- Switch MIC/TEL to the TEL position.
- Press RECORD, PLAY and PAUSE Buttons simultaneously.
- Adjust the VOLUME control for a satisfactory level.

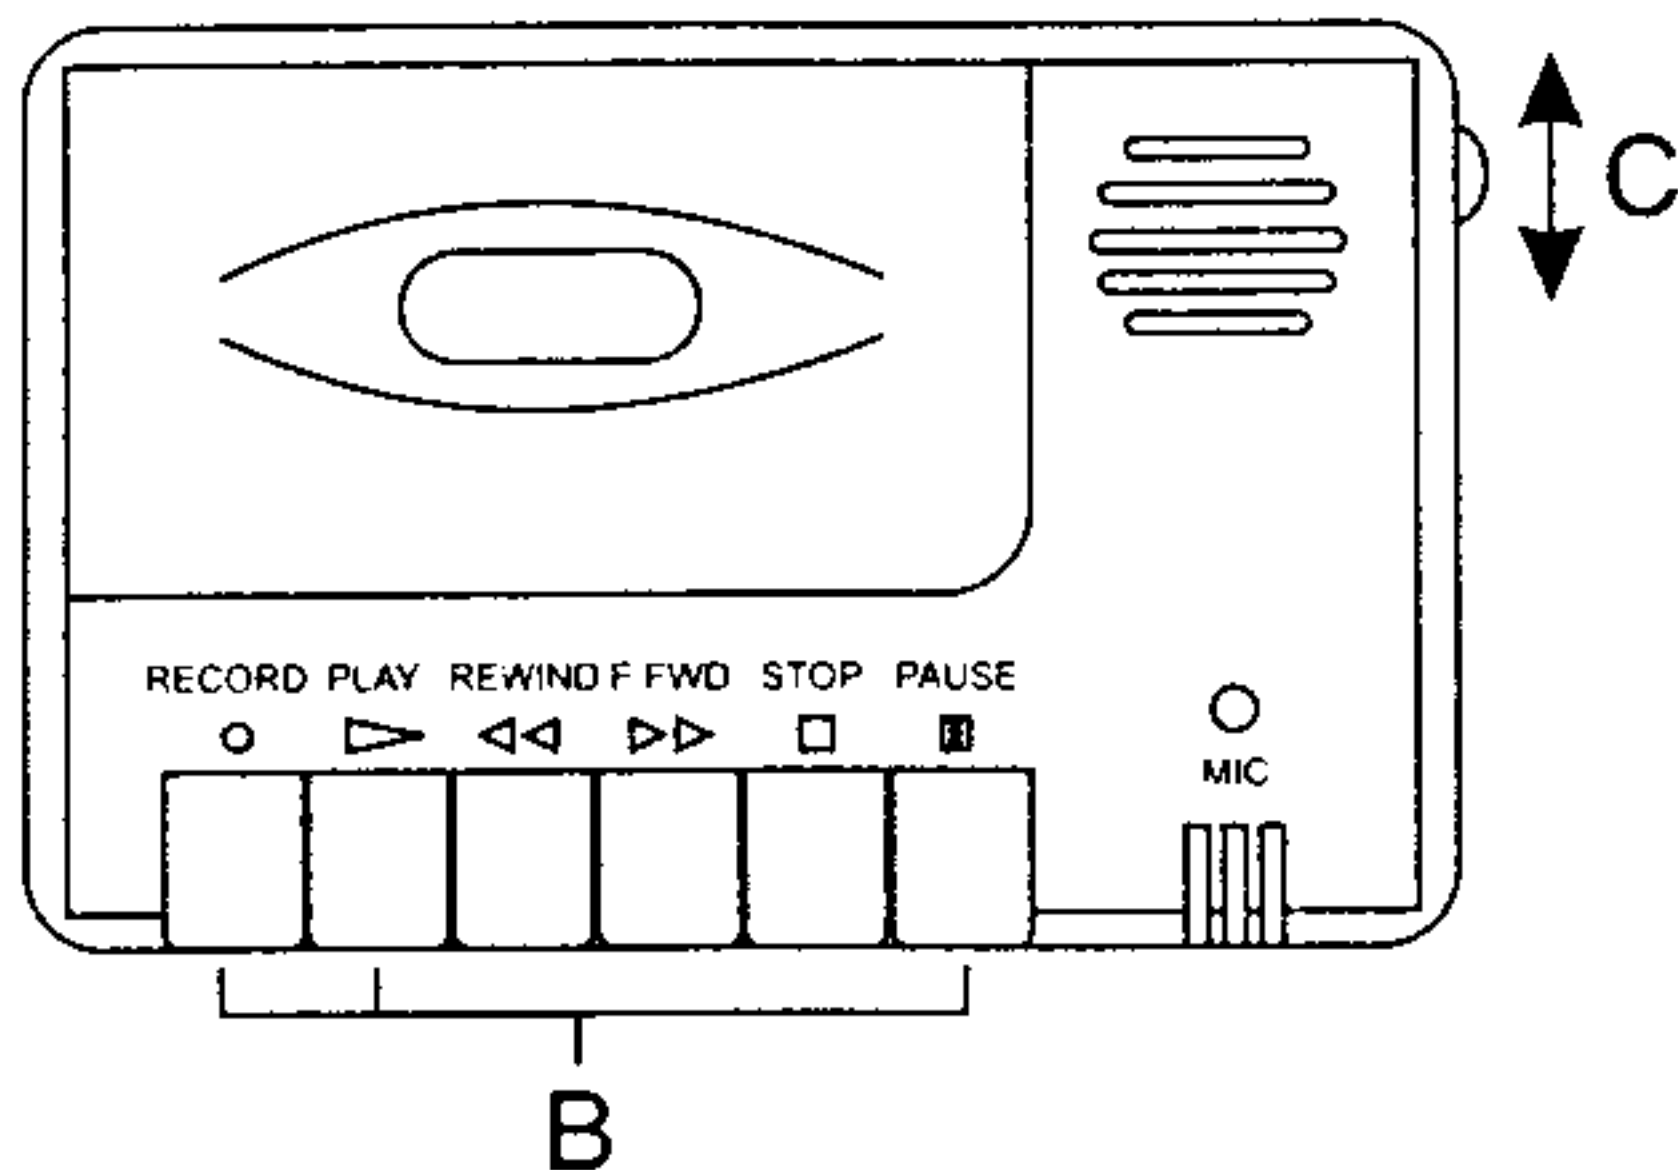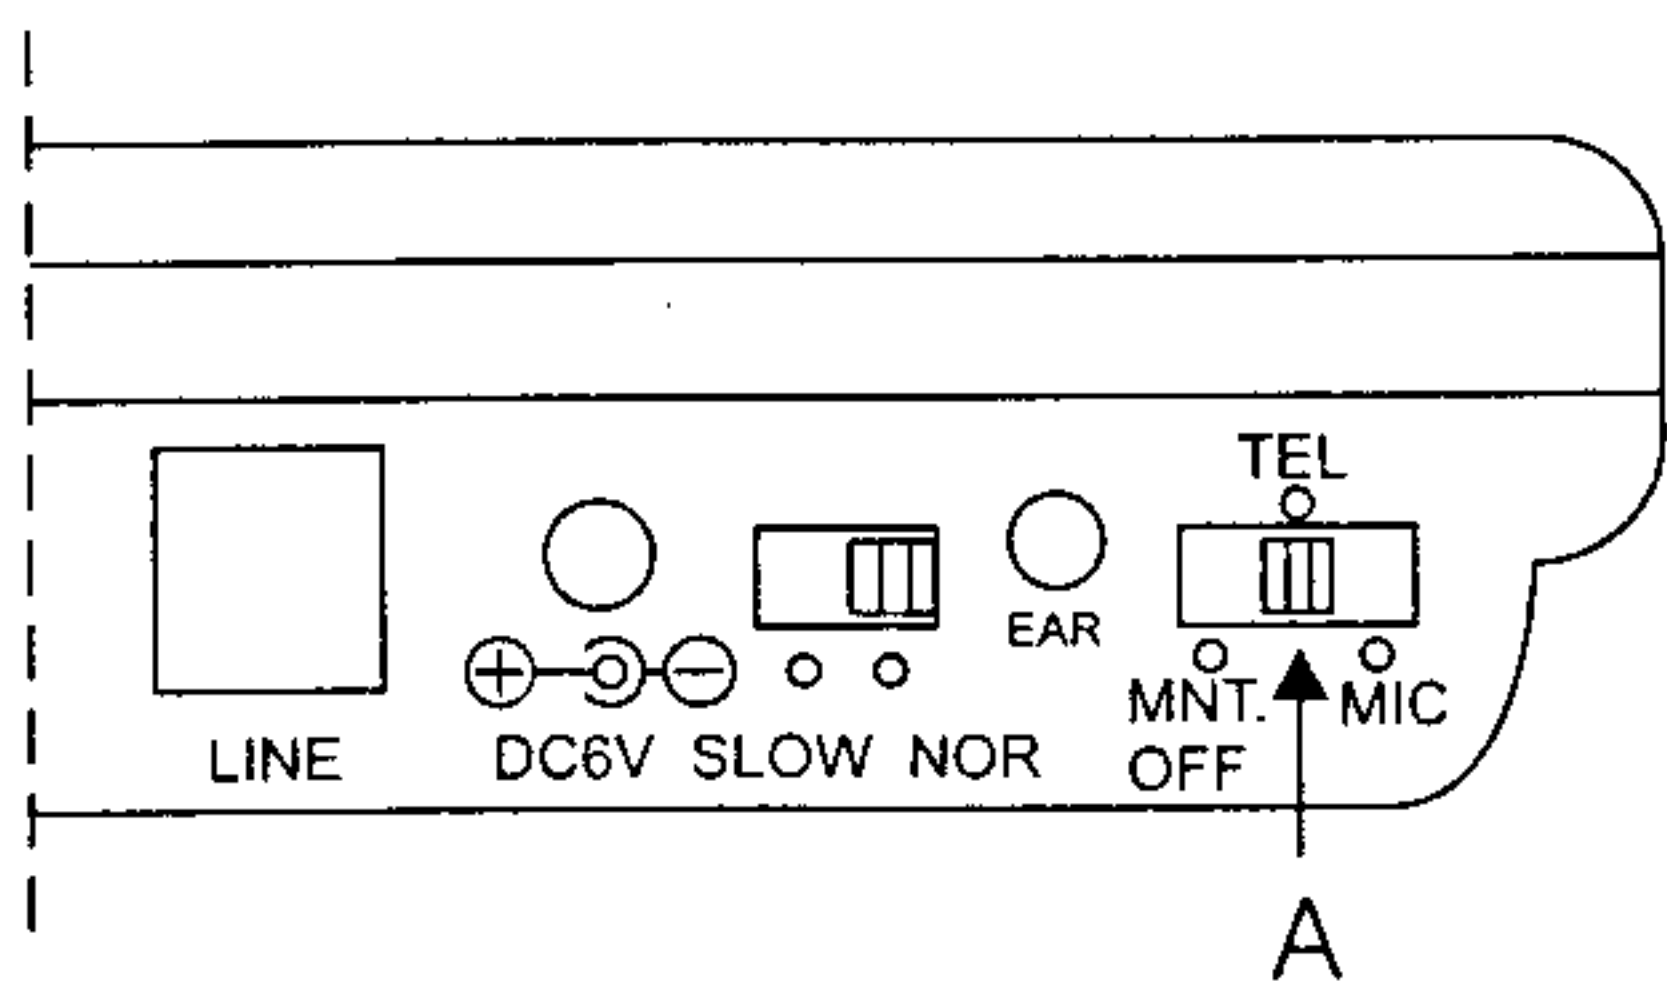

EXTENDING THE RECORDING TIME


- Switch the NOR/SWITCH to the slow position.

Note: When playing back to the tape it must be played back with the NOR/SWITCH in the same position as the recording was made.

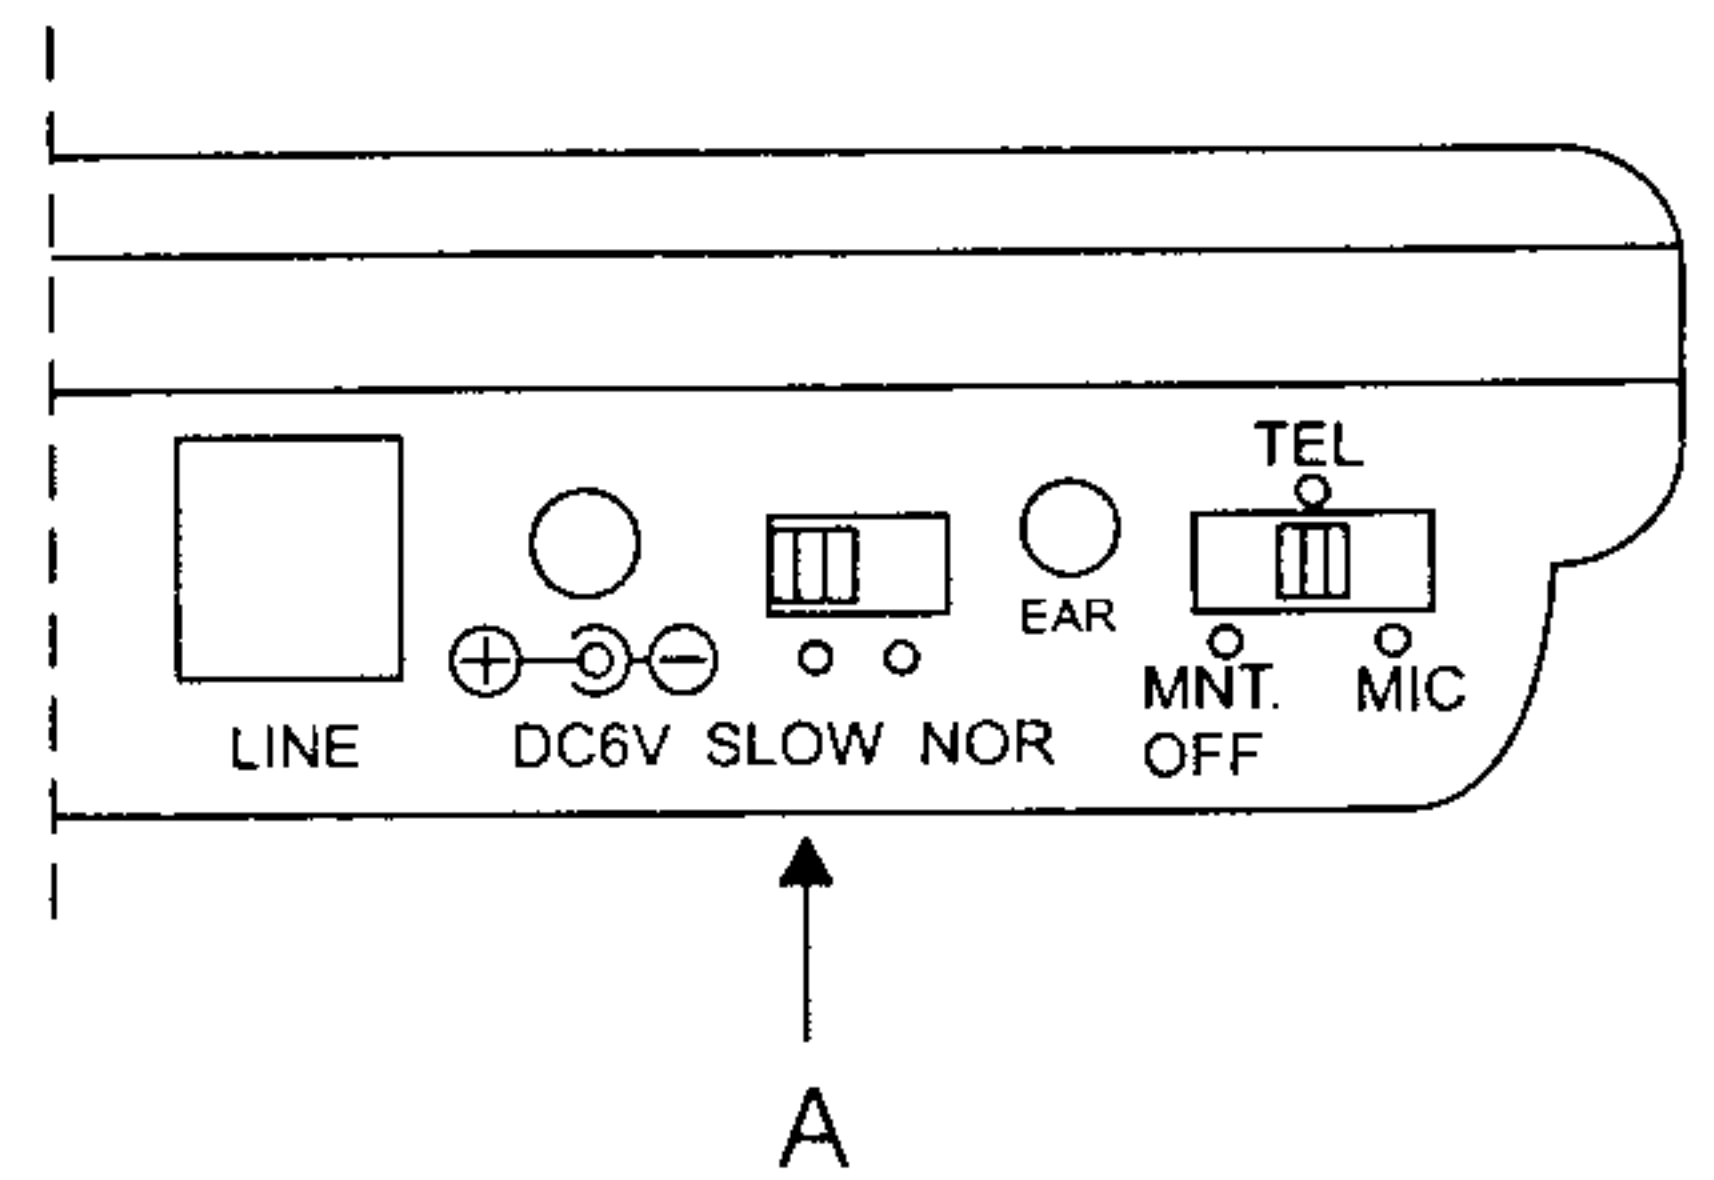

MONITOR OFF SWITCH

- Switch the switch to the MNT. OFF position to switch the speaker off. No monitoring is then possible via the speaker.

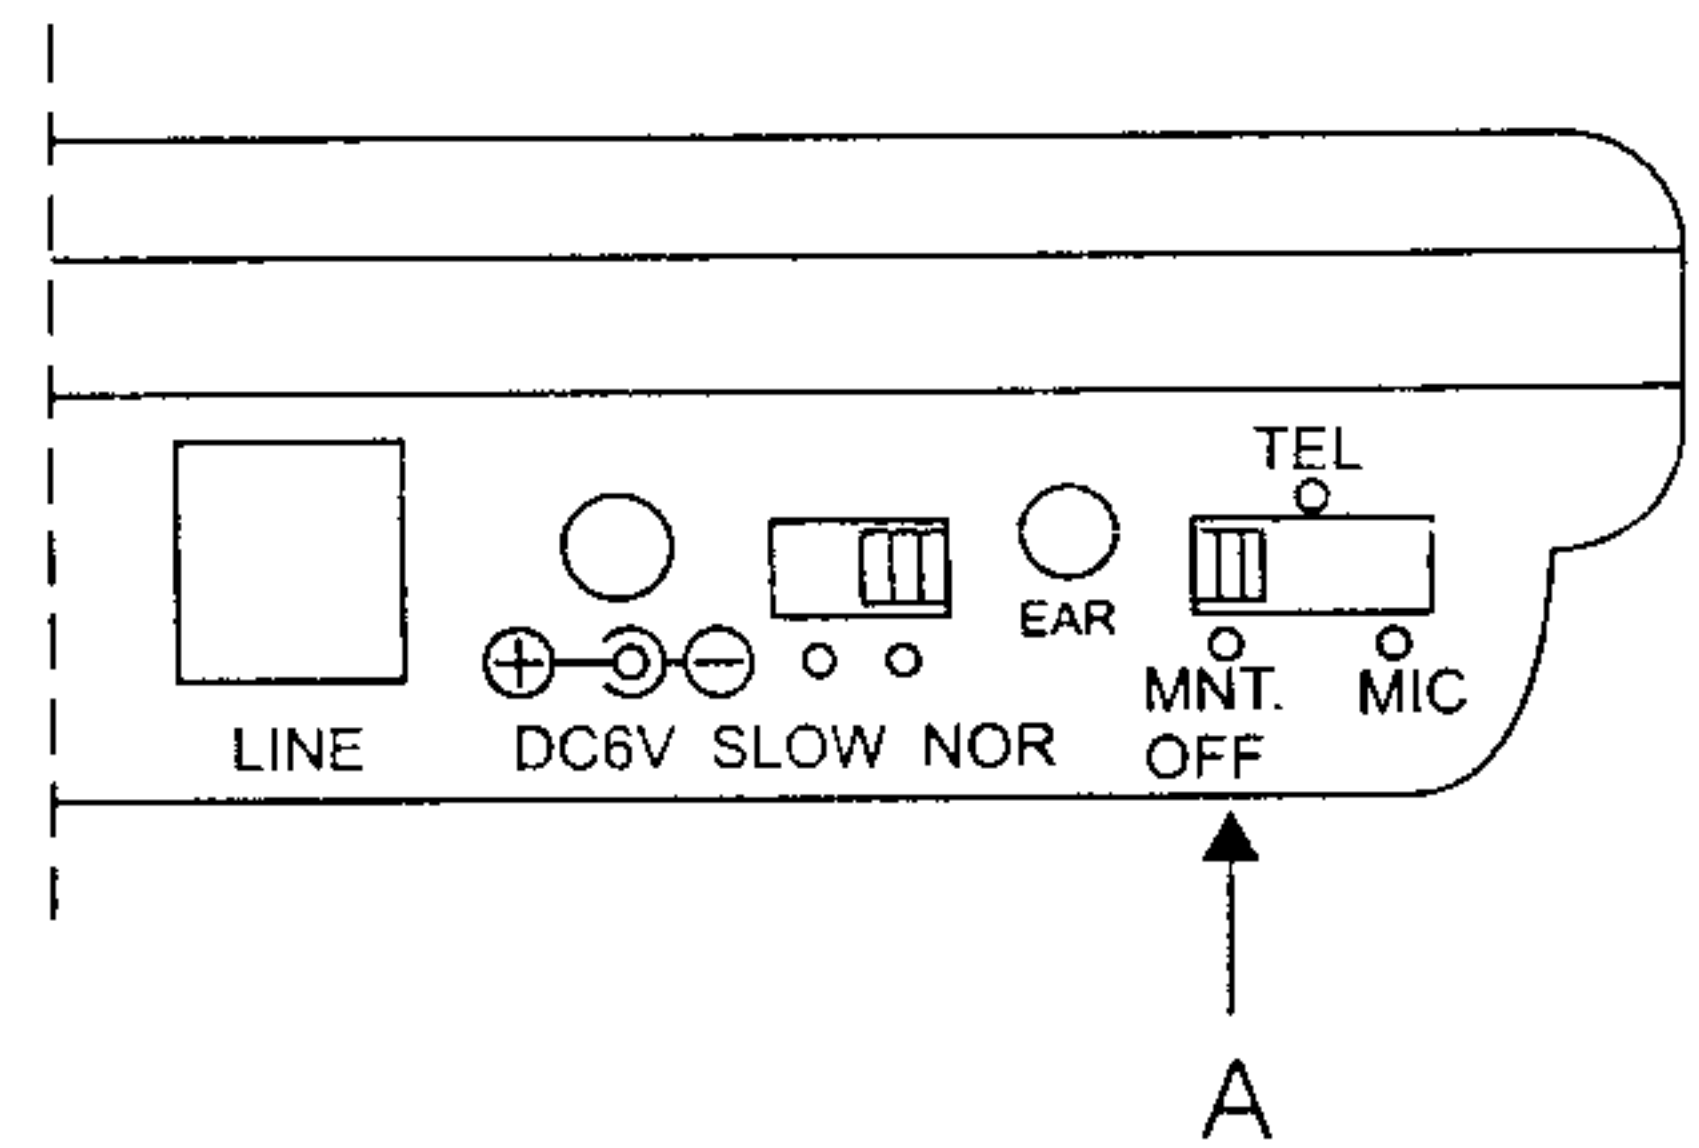

PLEASE NOTE- OFTEL REGULATIONS

All parties to any two-way live speech telephone call which is being or may be recorded shall be made aware that it is being or may be recorded and of the purpose(s) of so doing. A record shall be kept of the means by which parties to the call were made aware that it was subject to recording.

All parties to any telephone call which is being or may be silently monitored shall be made aware that it is being or may be silently monitored and of the purpose(s) of so doing. A record shall be kept of the means by which the parties to the call have been made aware that it was subject to silent monitoring.

For the avoidance of doubt, the means of making the relevant parties aware may be by prior written notice or a warning given during the call itself.